FOOD STEAMER

EWFS2SD3

-HOUSEHOLD USE ONLY-

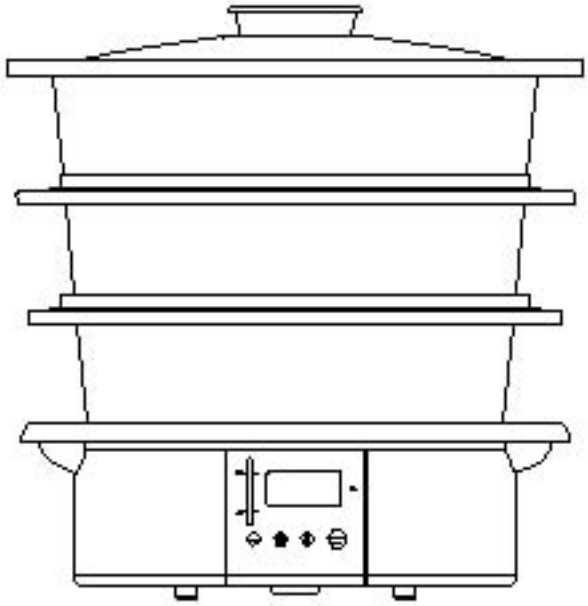

⚠ *CAUTION:*
BEFORE USE, PLEASE READ AND FOLLOW ALL IMPORTANT SAFEGUARDS, PRECAUTIONS AND OPERATING INSTRUCTIONS.

Table of Contents

Safety Instructions ---------- 3-5

Parts and Features ---------- 6

Assembling & Operating Instructions ---------- 7-8

Cleaning and Maintenance ---------- 8

Warranty ---------- 9

What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining, or operating appliance.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.

Recognize Safety Symbols, Words, Labels

⚠ WARNING

WARNING-Hazards or unsafe practices which **COULD** result in severe personal injury or death.

⚠ CAUTION

CAUTION-Hazards or unsafe practices which **COULD** result in minor personal injury.

IMPORTANT SAFEGUARDS

⚠ WARNING

When using electrical appliances, basic safety precaution should always be followed, including the following:

IMPORTANT SAFEGUARDS

1) Read all instructions.

2) This appliance is for household use only. Do not use outdoors.
3) Do not use this appliance for other than its intended use.
4) Before using for the first time, check if voltage indicated on the base of the appliance corresponds to the voltage in your home.
5) Do not turn the power on unless this appliance is properly assembled.
6) Close supervision is necessary when any appliance is used by or near children.
7) Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

Return appliance to authorized service center for examination, repair or adjustment.

8) The use of attachments or accessories not recommended or sold by the manufacturer may result in fire, electric shock or injury.
9) Unplug the appliance from the outlet when not in use, assembling and disassembling, and before cleaning. Make sure the appliance cools down completely before assembling, disassembling and cleaning.
10) Do not let cord hang over edge of table or counter, or touch hot surfaces.
11) Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
12) Do not use outdoors.
13) Never touch the hull before it cools down.
14) Do not remove the lid during cooking.
15) Always keep the necessary amount of water in reservoir for use. Make sure not to go over maximum level and also not to go below minimum level.
16) Do not operate the appliance without any food or water.
17) Always clear the mixture of oil and water out of the tray every 35 min or so to stop the mixture from entering the reservoir.
18) Always put the lid on the steam container and make sure to match lid's handles to the steam container's handles.
19) Steam is hot. Handle carefully when removing the lid.
20) Always operate lid with cover in place.

⚠ *WARNING:*
To protect against electric shock, fire, and injury to persons, do not immerse main cord, plug or unit in water or any other liquid.

⚠ *WARNING:*
This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.
Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the appliance or any extension cord used with this appliance. Do not attempt to defeat the safety purpose of the polarized plug.

SAVE THESE INSTRUCTIONS

Parts and Features

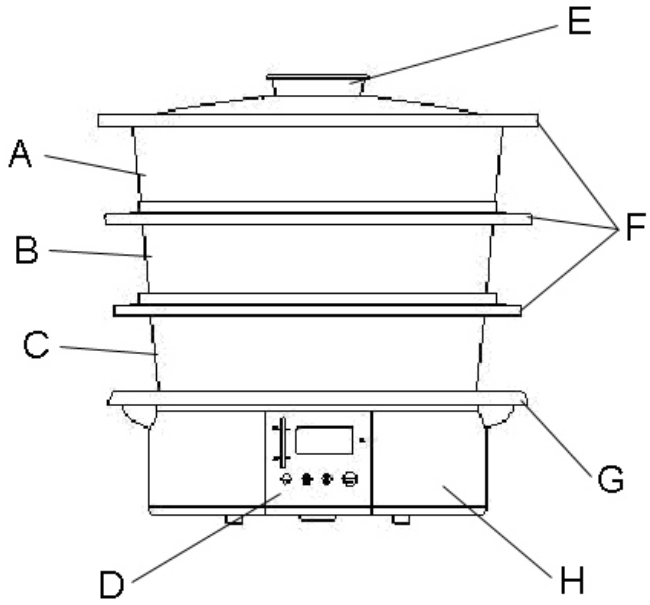

A. Top Container
B. Middle Container
C. Bottom Container
D. Digital Control Panel
E. Lid
F. Container Handles
G. Side Handles
H. Stainless Steel Base

SPECIFICATIONS:

- Power Rating: 800 Watts
- Voltage Rating: 120V 60Hz
- 3-Layer Food Containers
- Brushed Stainless Steel Base
- Digital Control with 8 Programs

Before Your First Use

Carefully unpack the food steamer and remove all packaging materials. Select a flat, heat-resistant, non-flammable surface to place the food steamer. Do not immerse the product in water or other liquid. To remove any dust that may have accumulated on the removable parts during packaging, clean the surface with damp cloth and remove any stickers (except for any warning/caution stickers)

Operating Instructions

PRE-PROGRAMMED FUNCTIONS / AUTOMATIC PROGRAMS (1-7)

1. Connect the plug to power supply. LCD will display “00:00”.
2. Choose the appointed cooking programs by pressing “+” or “-“.

Program Number	Types of Food	Reference Time (min)
1	Rice	33
2	Chicken	30
3	Fish	26
4	Eggs	23
5	Prawns	21
6	Vegetables	35
7	Fruits	20
8	Others	Manual
0	Turn Off Display	N/A

3. After selecting the cooking program, press “START” to begin cooking. The clock will count down with indicator on. When the timer counts down to 00:00 on LCD display, it will beep 4 times with indicator light flashing rapidly alerting that the function has been completed.

MANUAL FUNCTION (#8)
Manual function allows user to set the time flexibly according to personal preferences.

1. Select the function by pressing “+” or “-“ to #8.
2. Press “START” and timer will start blinking. Set the desired time by pressing “+”. Press “-“ to change the flashing “0” position which will allow user to set detailed time.
3. After time has been set, press “START” again to begin cooking. The clock will begin to count down.

HOW TO PRE-SET PROGRAMS
This feature will allow user to pre-set any program for future cooking. A user may select the start time and function ahead of time as a preference.

1. Under the condition where LCD is displaying “00:00”, press “PROG” to prearrange cooking.
2. While the “00:00” is flashing on LCD, press “+” to set the time. Press “-“ to change the flashing “0” position.
3. After time has been set, press “PROG” again to enter the procedure of choosing appointed programs.
4. After a program has been selected, press “START” to start the function and the clock will begin to count down

Cleaning and Maintenance

COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE.

Be sure to unplug the appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or other liquid.

Never use harsh abrasives, caustic cleaners on the interior surface.
Wipe dry with clean cloth. For stubborn stains, use a nylon or plastic scouring pad or a powdered, non-abrasive cleaner. Dry thoroughly before closing.

To clean the exterior finish, simply wipe with a clean damp, cloth.
Re-fit the bowl after cleaning. This keeps the mechanism underneath covered.
For all other parts, wash by hands and dry thoroughly.

SAVE THESE INSTRUCTIONS

Limited Warranty

This **Ewave** product is warranted, to the original purchaser or gift recipient, to be free from any manufacturing defects under normal use and conditions for a period of one (1) year from the date of purchase as shown on retailer's receipt.

The obligation of **MC Appliance** under this warranty shall be limited to repair or replacement (at our option) during the warranty period, of any part that proves to be defective in material or workmanship under normal installation and use. The product is to be returned to **MC Appliance** or an Authorized Service Center **POSTAGE PREPAID**. A copy of the original receipt along with your name, address and phone number must accompany products returned. Include a description of the defect along with the date you purchased the product.

This warranty shall be invalid if the product is damaged as a result of misuse, abuse, negligence, defacement, destruction, accident, fire or other casualties or alterations in any manner. Improper repair, improper use of electrical voltages or currents, alteration of serial number, maintenance by any person or entity other than our own Service Facility or Center, or any use not in conformity with product instruction, shall render this warranty invalid.

MC Appliance assumes no responsibility for damage resulting from the use of this product in a manner or location other than that for which it was intended. **WARRANTY CONDITIONAL TO NORMAL AND NON-COMMERCIAL USE OF THIS APPLIANCE FOR DOMESTIC USE ONLY.**

For the nearest Authorized Service Center, contact:
Ewave Customer Service: 1-888-775-0202
Or visit our website at www.mcappliance.com